


The Receiver

Dual Portable Wireless Temp Controller

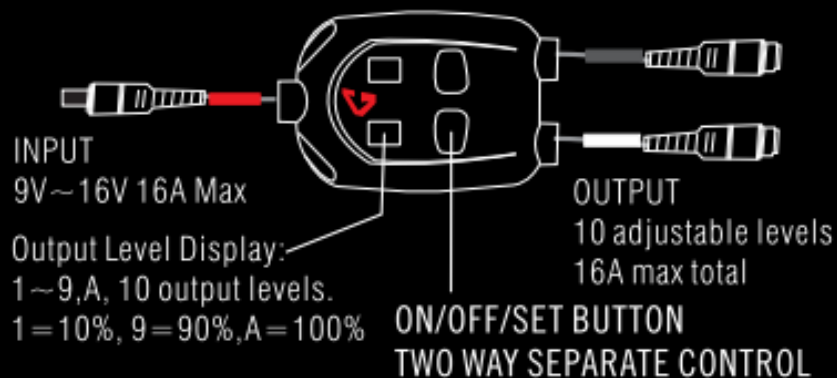

With Last-Setting memory feature.
Disconnect the input plug rather than
turn it off, then memory setting will start
when unit is reconnected.

LED shows blinking "L" when
input is less than 11V.

Blinking "E" = over current protection,
please check load or connection.



can also be operated through
the remote wireless controller
with knob

To pair the remote with the receiver, connect the red
input lead to a power source (9v -16v), press both
buttons on receiver at the same time the receiver LED
will flash "A" then turn either knob on remote
clockwise. The receiver LED will now read 0-9 and A.
Pairing is now complete.




The Remote



Display in receiver:
1=10%, 9=90%,A=100%.



10 output levels.
With LED indicator inside,
will flash up shortly.
switching and hold for a while
before change to next setting.

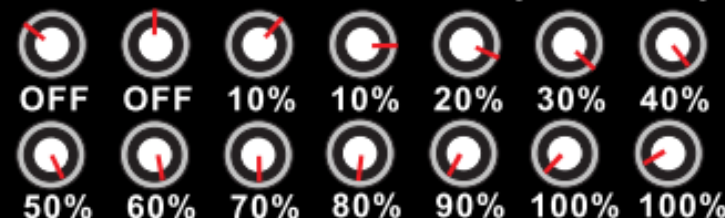

* Battery CR2032 inside behind label.